Ritter®

Installation Instructions

002-0557-00 THERMOFORM UPHOLSTERY KIT

(For the Models 311, 319, 75 Evolution)

Installation

I. Headrest Cushion (Fig. 1- A)

1. Place the table in the chair position.
2. Align the pillow mount (1) on the headrest cushion (2) with the pivot mount (3) of the table.
3. Press the parts fully together and secure by latching the three retaining latches (4).

II. Back & Seat Cushion (Fig. 1- B)

1. Place the table in the horizontal (flat table) position.
2. Place the Back and Seat Cushion Assembly (5) in position on the table.
3. Swing the back cushion (A) up so that it rest against the seat cushion (B).
4. Align the two mounting studs (6), on the under side of the seat cushion (B) to the locking slots in the seat weldment (7) and insert the studs (6) into the slots.
5. Slide the seat cushion (B) toward the head-end of the table until the latch studs (8) drop into the stud holes in the seat weldment (7).
6. Secure the seat cushion (B) by latching the two locking tabs (9) onto the latch studs (8).

NOTE
Before removing the covering from the adhesive strip on the velcro check to insure the back cushion is positioned correctly to allow the latch studs to insert properly in the stud holes of the back weldment.

7. Swing the back cushion (A) away from the seat cushion (B) and check the position of the latch studs (10) to insure they insert properly in the latch holes of the back weldment (11).
8. Lift the back cushion (A), remove the covering from the adhesive strip of the velcro (12), and once again place the back cushion (A) in position on the back weldment (11).

NOTE
After locating the velcro strip onto the back weldment by pressing on the back cushion, raise the back cushion and firmly press the velcro strip to the back weldment to insure the strip adheres thoroughly.

9. Secure the back cushion (A) by latching the two locking tabs (13) onto the latch studs (10) and then press down on the back cushion, at the location of the velcro, to adhere the velcro (12) to the back weldment (11).

III. Leg Cushion (Fig. 1-C)

1. Place the foot extension (14) in the full up, horizontal position.
2. Insert the two latch studs (15) on the bottom of the leg cushion (16) into the two stud holes in the foot extension (14).
3. Latch the two locking tabs (17) onto the latch studs (15) to secure the leg cushion (16) to the foot extension (14).

IV. Footrest Cushion (Fig. 1-D)

1. Squeeze the release levers, and slide the footboard weldment (18) off the foot extension weldment (14).
2. Place the footrest cushion (19) upside-down on a clean, flat surface.
3. Place the footboard weldment (18) in position on the cushion (19) and secure the cushion by latching the three locking tabs (20) onto the three latch studs (21).
4. Install the footboard assembly (18) on the foot extension weldment (14), making sure it locks in place.

© Midmark Corporation - 1997

V. Color Side Panel Inserts (Fig. 1-E)

1. Insert one end of the side panel insert (22) into on of the panel slots on the side panel (23).

2. Flex the panel insert (22) in the center and place the free end of the insert into the remaining panel slot on the other end of the side panel (23.

3. Slide panel side to side to achieve proper fit.

WARNING

Check that all the upholstered cushions are secured to the various sections by attempting to lift up on each cushion. Failure to do so could result in injury to a patient.

Removal

I. Cushions (Headrest, Back & Seat, Leg, and Footrest)

1. Locate the installation instructions for the appropriate cushion(s) and reverse the instructions for removal.

2. Using and index finger, reach thru the access hole and pull outward on the side panel insert (22) until it "pops" off the side panel (23).

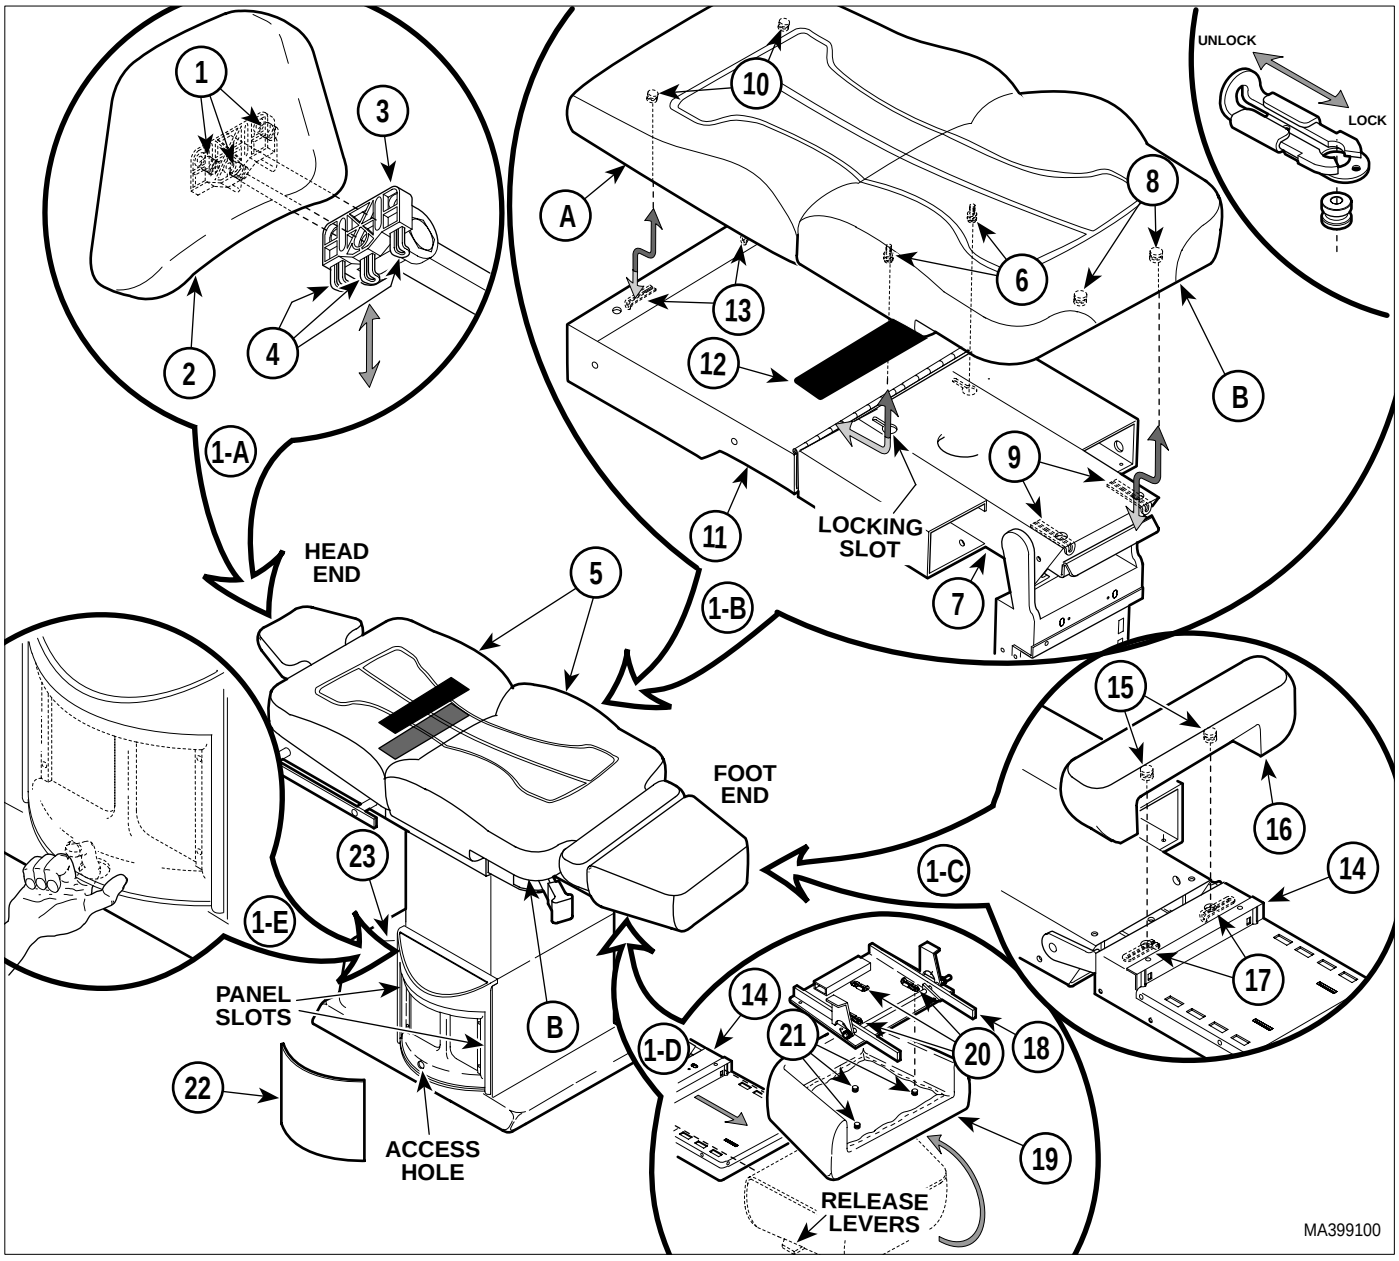

FIGURE 1

003-0870-00 REV. A (6/97)

© Midmark Corporation - 1997

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542